

VM-813 Money Control Station (MCS) Local Account PIN Codes

INTRODUCTION

A Local Account works similar to a Store Credit Card, where the card is replaced by a PIN number. A user can get a snack, soda or coffee using a PIN code and the operator of the machine can bill for that sales item at some point in the future. The way it works is the operator sets up a PIN account on the VM813, gives the PIN to the user and then uses the sales data from the VM813 to do the billing. The instructions on this sheet will go over setting up the Local Accounts. To review saving sales, please refer to the Saving Sales Instructions found at <http://www.multi-max.com/instruction>

PIN VALUES

Each PIN Code has four values:

Name: The name that will show up on the Sales Report.

Reset: The number of vends the PIN will reset to when the next reset day occurs.

Days: The number of days between resets.

Count: The number of vends currently left for this pin until the next reset day.

Example: If a PIN has a reset=2 and days=1 then every day at midnight the pin will go back to 2 vends. The customer has 24 hours to use the 2 vends. The number of vends does not accumulate, it just resets back to 2 every 24 hours.

USB KEYBOARD KEYS

F1: Add new PIN code.

F12: Delete highlighted PIN.

UP, DOWN, LEFT, RIGHT ARROW: Save changes and move cursor.

PAGE UP, PAGE DOWN: Move up or down by full screen.

A-Z, 0-9: Acceptable letters for Names of PIN accounts.

STEP BY STEP INSTRUCTIONS ON VM813

1. Enter your pin to access the supervisor menu.
2. Press button to open doors.
3. Pull out the cash drawer.
4. Drop the front face plate.
5. Insert the USB keyboard in the USB port by the bill acceptor.
6. Press 6, 6 to get to Main Menu 3 (on VM813 keypad).
7. Press 5 to enter Local Accounts Mode (on VM813 keypad).
8. Press F1 to add a new account (on USB keyboard).
9. Write down the PIN code so you do not forget it.
10. Type the name of the PIN holders name (ie Bob Smith) then Right arrow (on USB keyboard).
11. Type a number from 0 to 255 for the number of vends per period of days then Right arrow (on USB keyboard).
12. Type a number from 1 to 30 for the number of days between resets then Right arrow (on USB keyboard).
13. Type a number from 0 to 255 for the number of current vends Right arrow (on USB keyboard).
14. Press the red cancel (-) button to exit Local Accounts Mode (on VM813 keypad).

The Instructions have been tested with software / user menus 1.54 and will work with any software greater than 1.54. To check the version of your software, press the option for MCS info from the supervisor menu. Firmware and Scripts can be downloaded at: <http://www.multi-max.com/support>

A Logitech K120 keyboard or equivalent USB keyboard is required for Local Account PIN Codes. These can be purchased from Multi-max by calling 800-462-2236.

More information can be found at: <http://www.multi-max.com>